




INSTRUCTIONS


Inground Mount

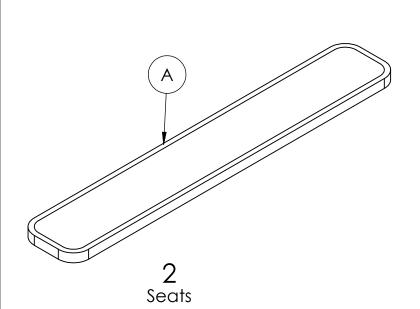


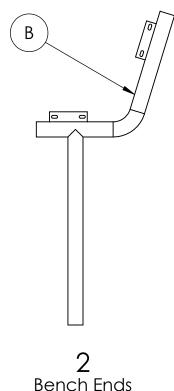

HARDWARE

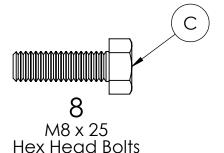

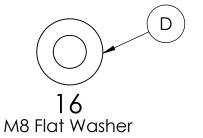



8 M8 Hex Nut

REQUIRED TOOLS (NOT INCLUDED)


1 - 13MM WRENCH

1 - 13MM SOCKET

NOTE: IT IS IMPORTANT TO KEEP ALL BOLTS FINGER TIGHT DURING ASSEMBLY UNTIL ENTIRE UNIT IS ASSEMBLED


HARDWARE & TOOLS REQUIRED FOR ASSEMBLY


2/3

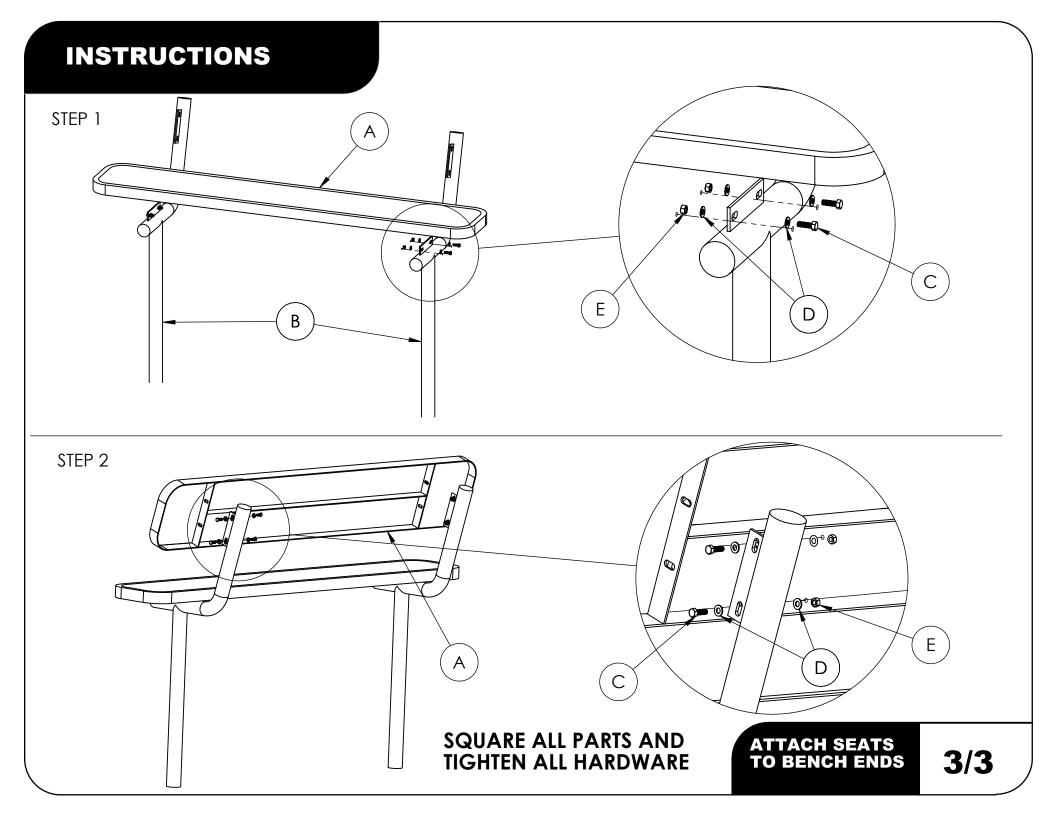


INSTRUCTIONS


Surface Mount

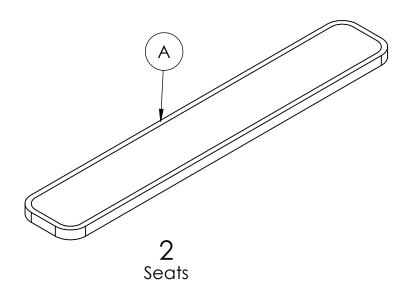


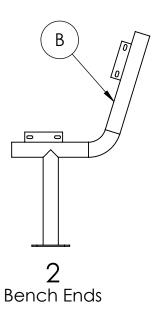

HARDWARE

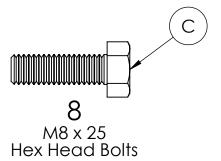

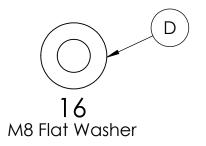



8 M8 Hex Nut

REQUIRED TOOLS (NOT INCLUDED)

1 - 13MM WRENCH

1 - 13MM SOCKET

NOTE: IT IS IMPORTANT TO KEEP ALL BOLTS FINGER TIGHT DURING ASSEMBLY UNTIL ENTIRE UNIT IS ASSEMBLED

HARDWARE & TOOLS REQUIRED FOR ASSEMBLY

2/3

INSTRUCTIONS D E ATTACH SEATS TO BENCH ENDS 3/3