


A

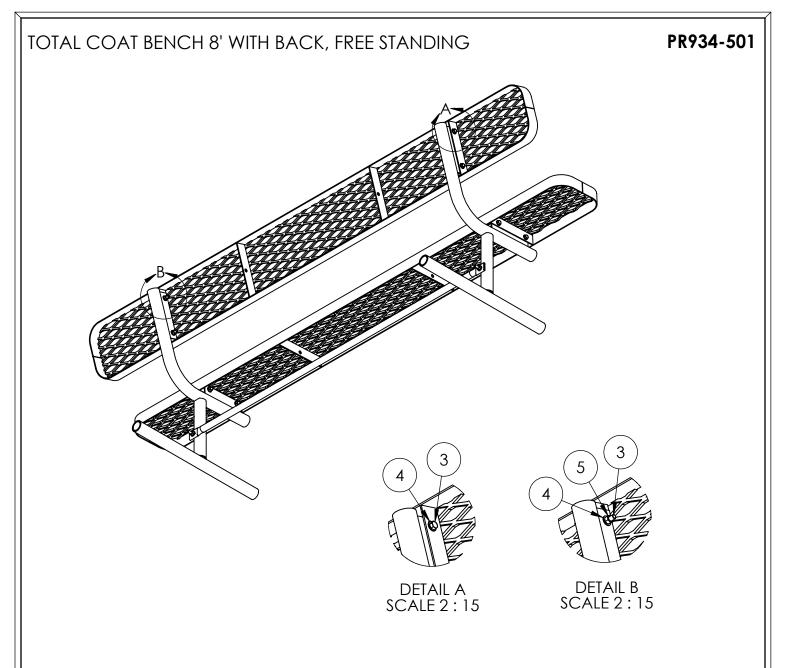

- 1. Drill plastic out of the mounting holes on the seat, stands and braces using a 7/16" diameter drill bit.
- 2. Bolt the seat to the stand and braces loosely using fixings provided. Set on level surface and tighten up.

<u>Tools List</u>

- 7/16" Drill bit
- 9/16" Socket
- 9/16" Wrench
- Imapct Gun (Optional)
- Drill

Periodic check of bolts tightness reccommended

In Accordance to California law: WARNING This product contains a chemical known to the State of California to cause cancer and birth defects or other reproductive harm.