


- 1. Drill plastic out of the mounting holes on the stands, seat and back using a 7/16" diameter drill bit.
- 2. Attach seat and back to the stands with fixings provided. Do not tighten up.
- 3. Attach the brace to the stands, set on level surface and tighten up all bolts.

ITEM NO.	DESCRIPTION	QTY.
1	Bench With Back Stand FS	2
2	8' Seat/Back	2
3	3/8"x1-1/2" SS Hex Bolt	8
4	3/8" SS Flat Washer	20
5	3/8" SS Nylock Nut	10
6	8' BENCH BRACE	1

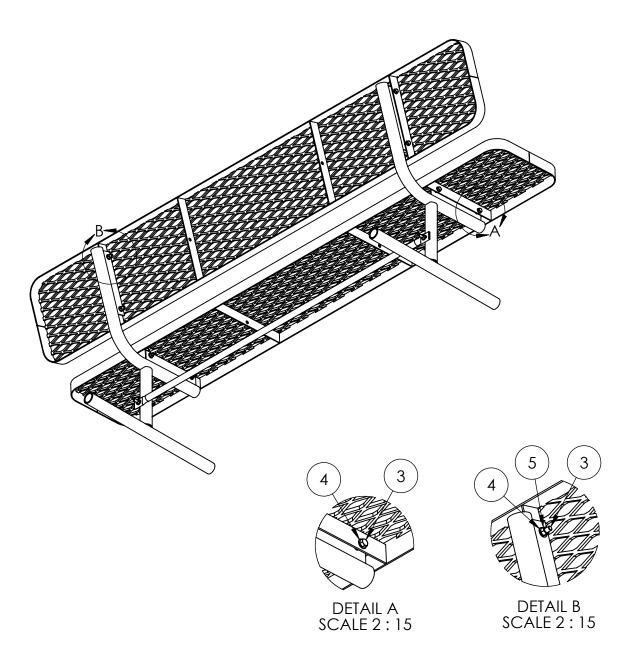

Tools List

- 7/16" Drill bit
- 9/16" Socket
- 9/16" Wrench
- Imapct Gun (Optional)
- Drill

Periodic check of bolts tightness reccommended

In Accordance to California law: WARNING This product contains a chemical know to the State of California to cause cancer and birth defects or other reproductive harm.