

BC1275 BC1276 BC1277 BC1278 BC1315 BC1316 BC1317 BC1318

REV# 2 7-15-2016

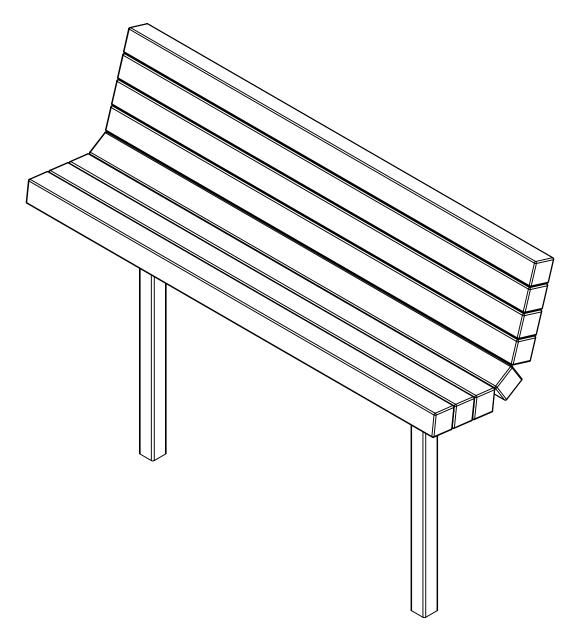

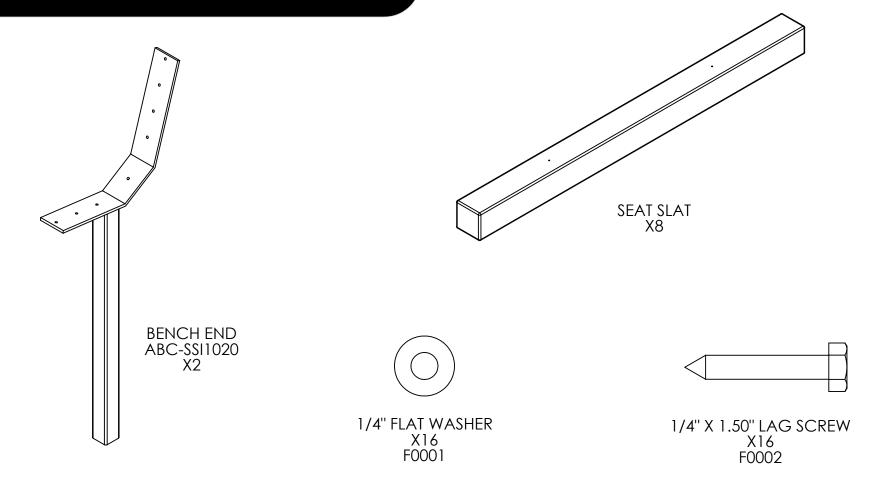

REQUIRED TOOLS:

- -(1) SCREW GUN
- -(1) 7/16" SOCKET
- -(1) 8" 10" POST HOLE DIGGER
- -(1) LEVEL

BEFORE INSTALLING BENCH, PLEASE CHECK LOCAL CODES TO ENSURE PROPER INSTALLATION. THESE INSTRUCTIONS ARE A GENERAL GUIDELINE ON HOW TO INSTALL A BENCH. IF UNSURE ON HOW TO INSTALL, PLEASE CONTACT A PROFESSIONAL.


REQUIRED MATERIALS:

- -READY-TO-MIX CONCRETE
- -LOOSE GRAVEL
- -WIRE & BRACING MATERIAL

INCLUDED HARDWARE & REQUIRED TOOLS FOR ASSEMBLY

REPEAT STEPS FOR REMAINING SEAT


SLATS

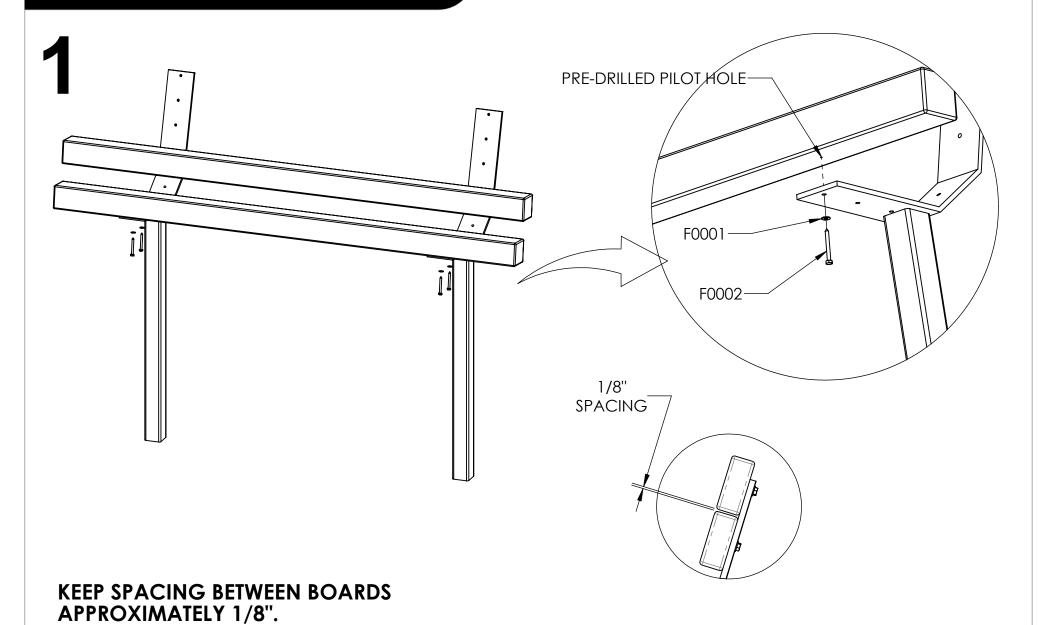

3/6


2

USING POST HOLE DIGGER, DIG TWO HOLES AS SHOWN BELOW. THEN, FILL IN EACH HOLE WITH APPROXIMATELY 4" OF LOOSE GRAVEL.

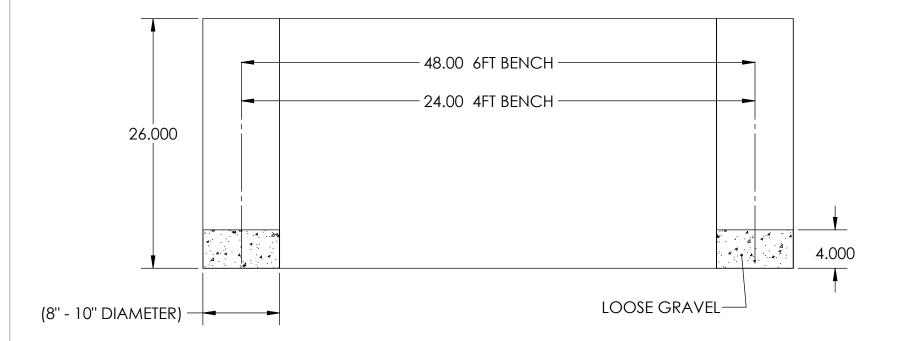


BEFORE INSTALLING BENCH, PLEASE CHECK LOCAL CODES TO ENSURE PROPER INSTALLATION. THESE INSTRUCTIONS ARE A GENERAL GUIDELINE ON HOW TO INSTALL A BENCH. IF UNSURE ON HOW TO INSTALL, PLEASE CONTACT A PROFESSIONAL.

CAREFULLY, PLACE THE BENCH INTO HOLES. CENTER EACH POST IN EACH HOLE AND LEVEL BENCH. ALSO, BE SURE TO CHECK SEAT HEIGHT TO ENSURE COMFORTABLE SEATING. SECURE PLACEMENT OF BENCH WITH BRACING MATERIALS AND FILL IN HOLES WITH READY-TO-MIX CONCRETE. ALLOW TO DRY AND REMOVE BRACING MATERIALS.

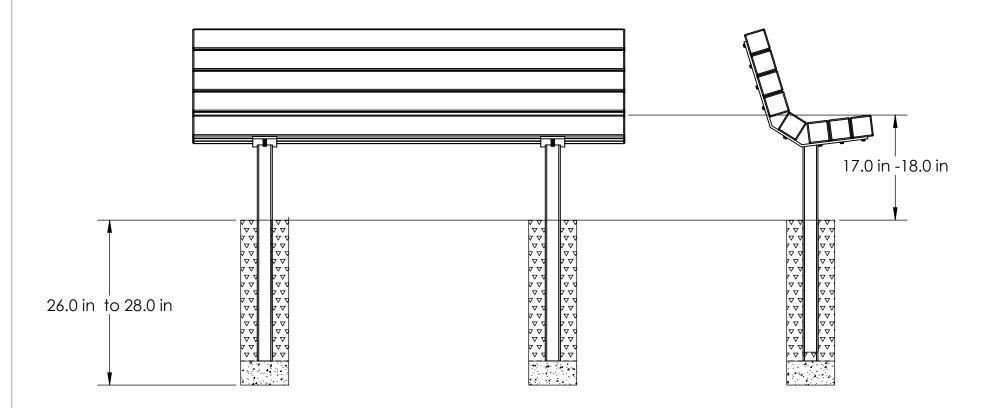

BEFORE INSTALLING BENCH, PLEASE CHECK LOCAL CODES TO ENSURE PROPER INSTALLATION. THESE INSTRUCTIONS ARE A GENERAL GUIDELINE ON HOW TO INSTALL A BENCH. IF UNSURE ON HOW TO INSTALL, PLEASE CONTACT A PROFESSIONAL.

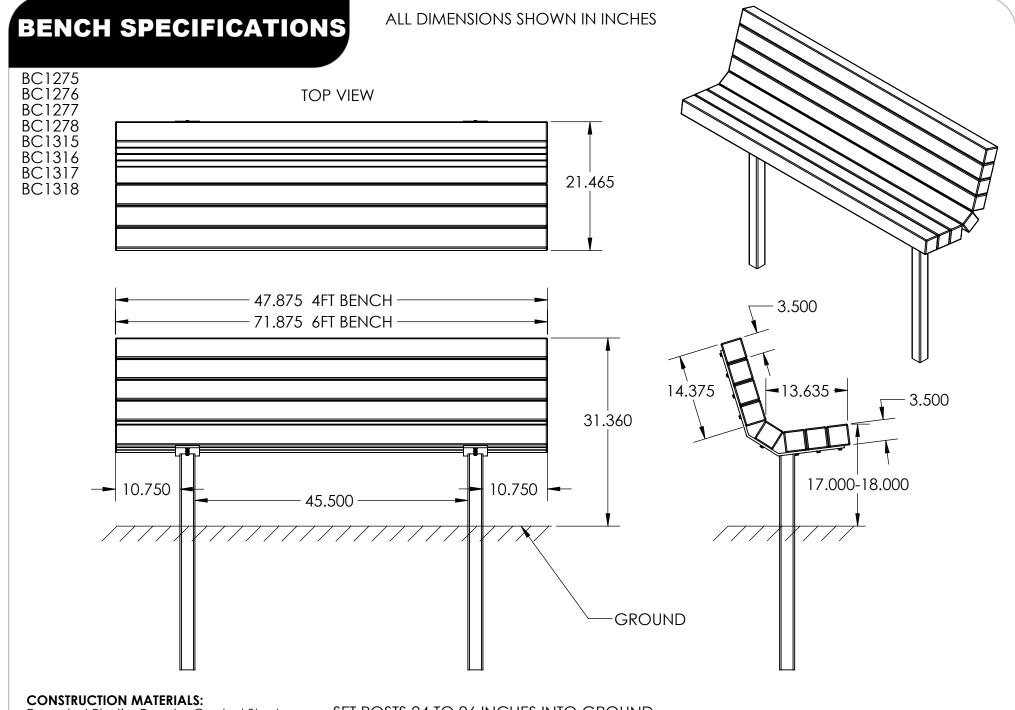

Recycled Plastic, Powder Coated Steel **HARDWARE**:

Stainless Steel

SET POSTS 24 TO 26 INCHES INTO GROUND